



THE RENTAL
STORE

OBSTACLE COURSE INSTRUCTIONS

For all "Obstacle Course" bounce houses

If we are setting it up

If we are setting it up (there is an extra charge for this), we will take care of transportation to and from, unrolling, blowing it up, and staking it down. It is your responsibility to tell us where any electrical, water, or sprinkler lines are located. We may turn off the blower if your event isn't for a while or there is no one there to supervise. Turn it back on whenever you are ready.

It is best if you meet us there to tell us where you would like it. Afterwards, we will roll it back up and take it away. You can but do not need to be there when we take it down.

The green blowers have a switch to turn them on or off. There are zippers around the bottom edge of the bounce house for quick deflation.

Transportation

- If you are setting it up, **a trailer is required for transportation**. The obstacle courses come on 1 to 3 large carts and will not fit in the bed of a truck. You are welcome to bring your own trailer or rent one from us.
- Bounce houses are on a 2-wheel cart (or multiple carts). We will also send the blower(s) and stakes.

Set Up

- Wheel the carts to the area you want the bounce house located and tip the cart forward so it falls on the ground with the cart on top. Remove the straps and take the cart off.
- Unroll and unfold the bounce house. If it is not oriented the way you want it, grab the corners with a couple people and spin it.
 - Whacky Chaos Jr. has carabiners attached that hook the parts together.
 - High Voltage Jr. is one piece.
 - The 52' Obstacle Course has a large velcro piece that attaches the two parts together.
- Find the tubes for the blowers to go in. There will either be velcro on the end of the tube, or use one of the black straps to attach it to the blower.
 - Whacky Chaos Jr. has 3 sections, but each forms a "Y" with the adjoining section, so two blowers are needed.

- The 52' Obstacle Course has two blowers, one for each section of the bounce house.
- High Voltage Jr. is in one piece, but uses 2 blowers that each connect to a tube.
- Ensure all zippers around the bottom edge of the bounce house are closed. There are up to 4 zippers (depending on the model). They are often underneath velcro covers.
- Turn on the blowers. It should only take 2-4 minutes for the bounce house to be fully aired up. If it is not blowing up, check for an open zipper.
- Put a stake in each of the rings on the corners of the bounce house or stake the white straps to the ground (again, depending on the model).

Tear Down

- Turn off the blowers and open all zippers. Remove the stakes from the ground and separate each section.
- Use 2 people to grab the corners and **fold each section into thirds**.
- After it is folded, roll it as tight as possible. Towards the end, place the black straps underneath the folded bounce house and **roll over the straps**.
- Place the cart on top of this roll and strap around the cart.
- Use a couple of people to lift it upright.

If the bounce house gets wet

- If rain or water gets on the bounce house, try to leave it inflated for as long as possible to let it dry out. It is much easier to roll up a dry bounce house! Feel free to call us if the bounce house rental is due but you think it should stay inflated to dry out longer.

Give us a call or email if you have any questions!

(218) 739-2294

office@fergusrentalstore.com